



Shunt release
 Vypínací spoušť
 Vypínacia spúšť
 Wyzwalacz wzrostowy
 Declanșator de deschidere
 Arbeitsstromauslöser
 Bobine à émission de tension
 Независимый расцепитель

NOARK


Mounting instructions
 Montážní návod
 Montážne inštrukcie
 Instrukcja montazu
 Instrucțiuni de asamblare
 Montageanweisung
 Instructions de montage
 Инструкция по монтажу
 Monteringsanvisning
 Istruzioni di montaggio
 Instrucciones de montaje
 Összeszerelési útmutató

Asennusohjeita
 Montage-instructies
 Instruções de montagem
 Navodila za montažo
 Οδηγίες Εγκατάστασης
 Инструкции за инсталиране
 Monteringsvejledningen
 Montažu upute
 Surinkimo instrukcijos
 Instalēšanas instrukcijas
 Скупштина упутство
 Paigaldusjuhendid

Caution: Installation by electricians only
 Varování: Montáž pouze osobou s elektrotech. kvalifikací
 Varovanie: Montáž iba osobou s elektrotech. kvalifikáciou
 Uwaga: Montaż tylko przezu prawnionych instalatorów
 Atenție: Instalare numai de către electricieni
 Vorsicht: Montagenur durch Elektrofachkräfte
 Attention: Montage uniquement par un électricien
 Осторожно: Монтаж только электрика

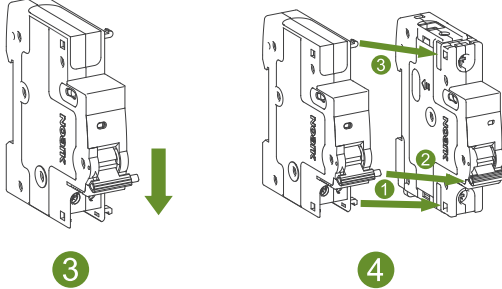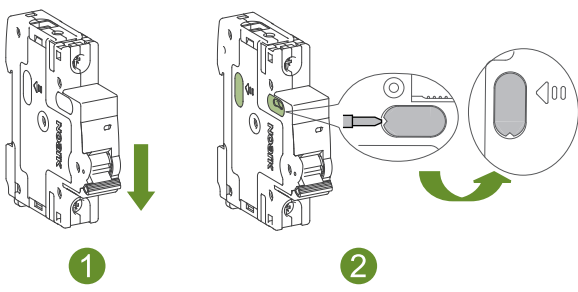


	1-6mm ²
	1Nm

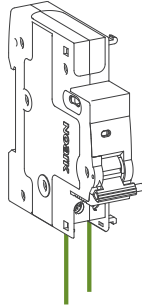

SHT31

SHT31


7

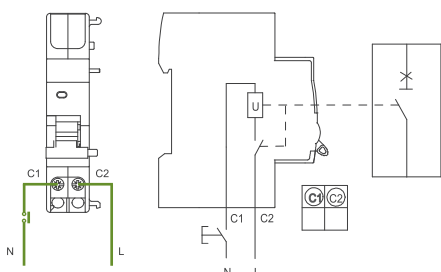

SHT31


SHT3111(1CO)

8

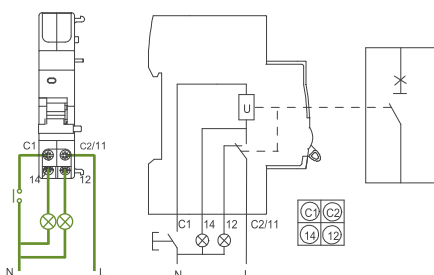


SHT31

9

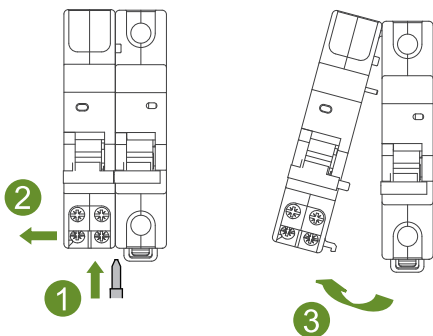


SHT31

10

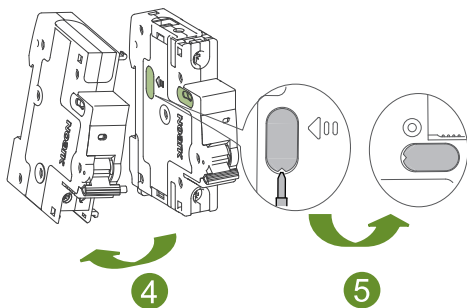

SHT31

11

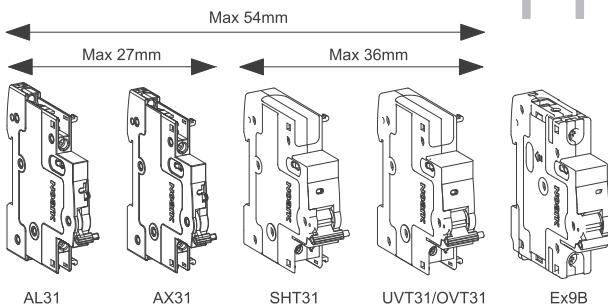

NOARK



Printed with environment-friendly paper

Copyright Noark. All Rights Reserved

www.noark-electric.eu