



Contactor
Stykač
Stýkač
Stycznik
Contactor
Leistungsschütz
Contacteur
контактор

IEC/EN 60947-4-1


Mounting instructions
Montážní návod
Montážne inštrukcie
Instrukcja montażu
Instruțiuni de asamblare
Montageanweisung
Instructions de montage
Инструкция по монтажу
Monteringsanvisning
Istruzioni di montaggio
Instrucciones de montaje
Összeszerelési útmutató

Asennusohjeita
Montage-instructies
Instruções de montagem
Navodila za montažo
Οδηγίες Εγκατάστασης
Инструкции за инсталиране
Monteringsvejledningen
Montažu upute
Surinkimo instrukcijos
Instalēšanas instrukcijas
Скупштина упутство
Paigaldusjuhendi


Caution: Installation by electricians only
Varování: Montáž pouze osobou s elektrotech. kvalifikací
Varovanie: Montáž iba osobou s elektrotech. kvalifikáciou
Uwaga: Montaż tylko przez uprawnionych instalatorów
Atenție: Instalare numai de către electricieni
Vorsicht: Montagenur durch Elektrofachkräfte
Attention: Montage uniquement par un électricien
Осторожно: Монтаж только электрика

NOARK

B



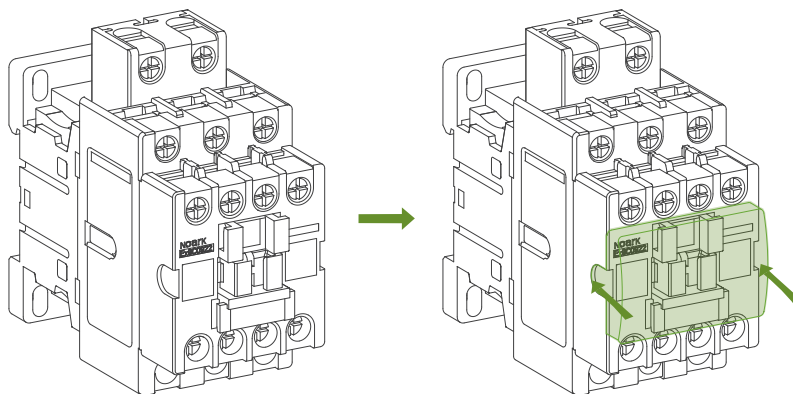






C

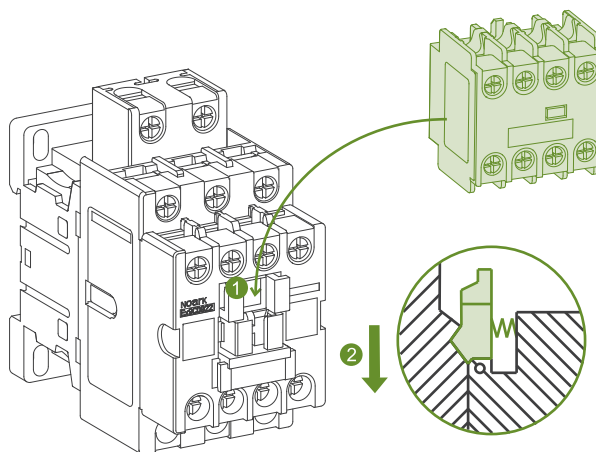

A

Ex9C09/Ex9C12/Ex9C18

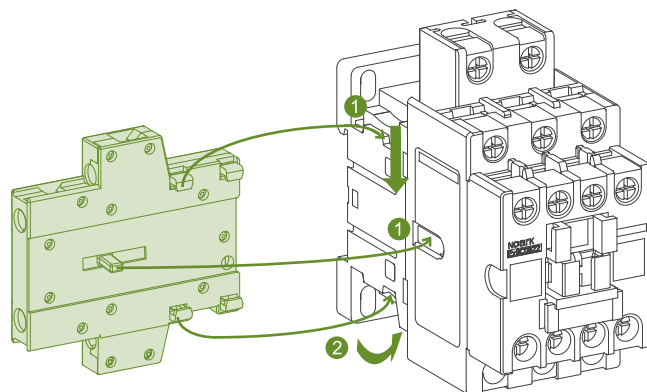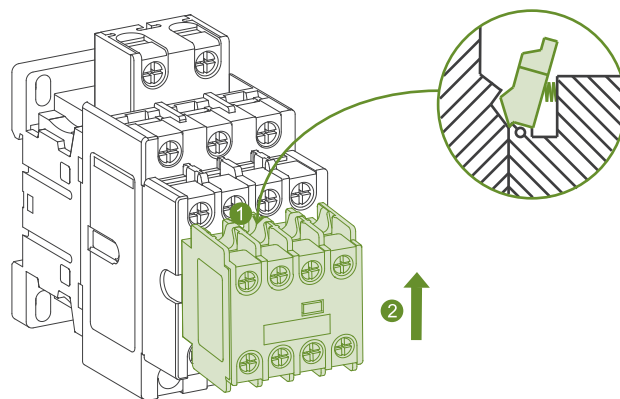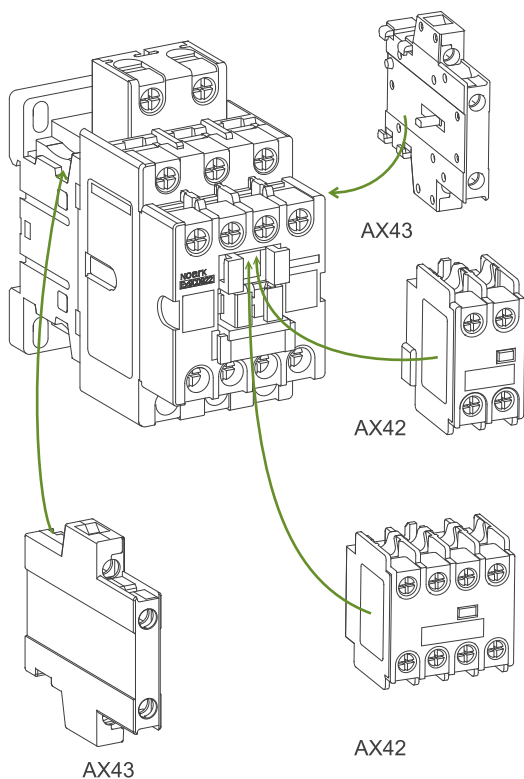

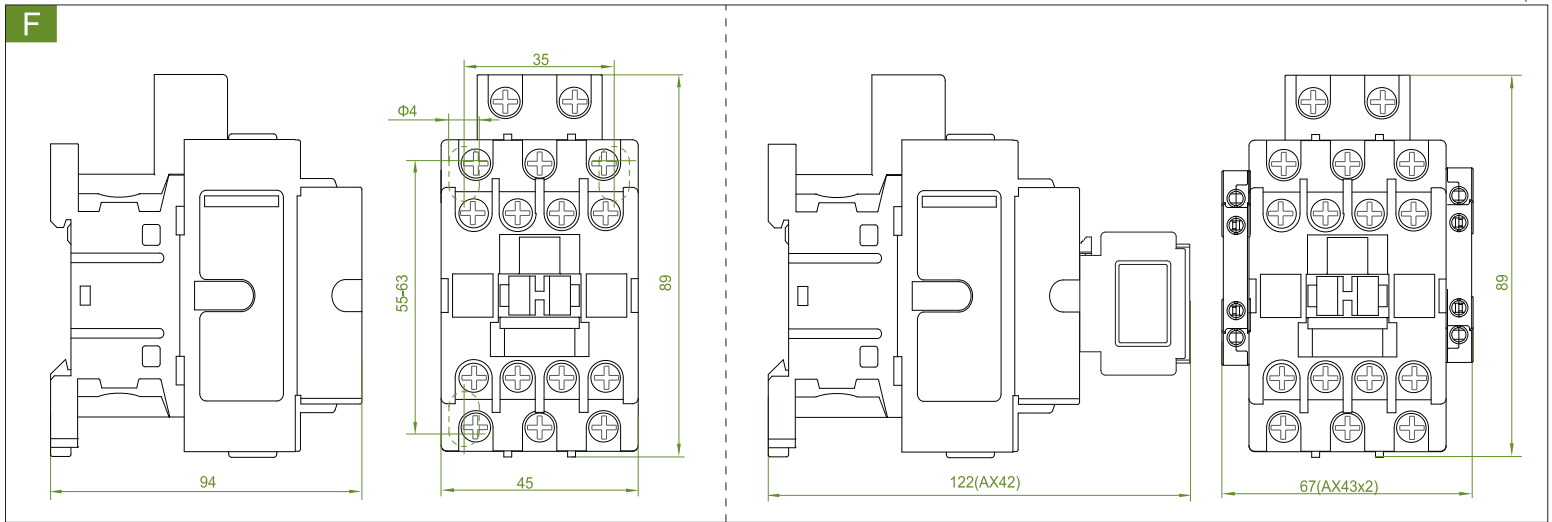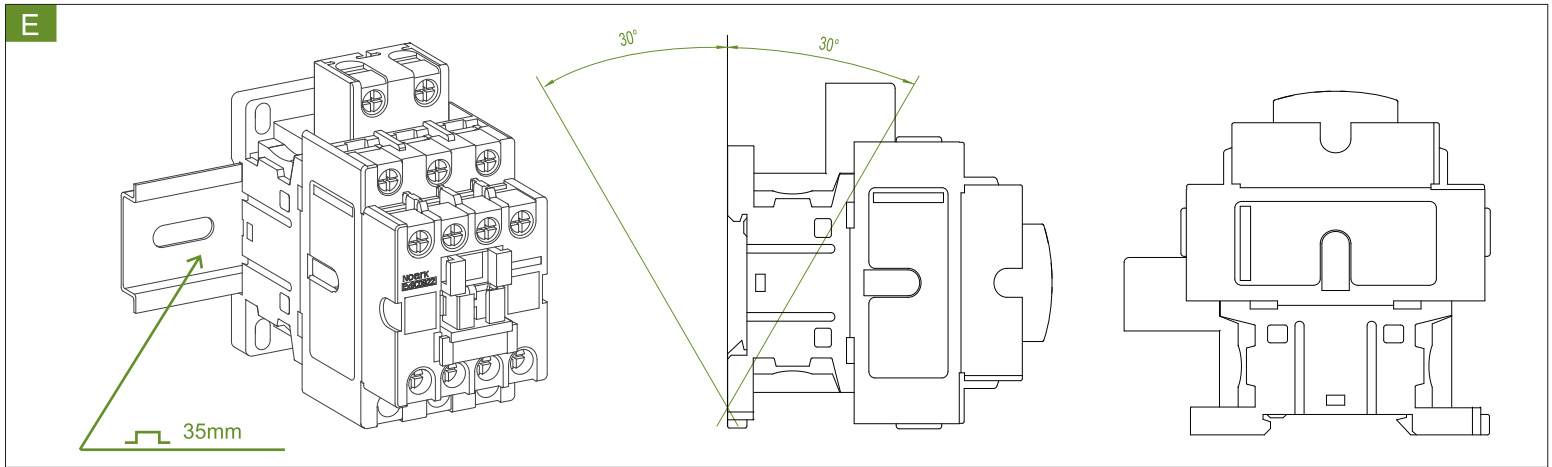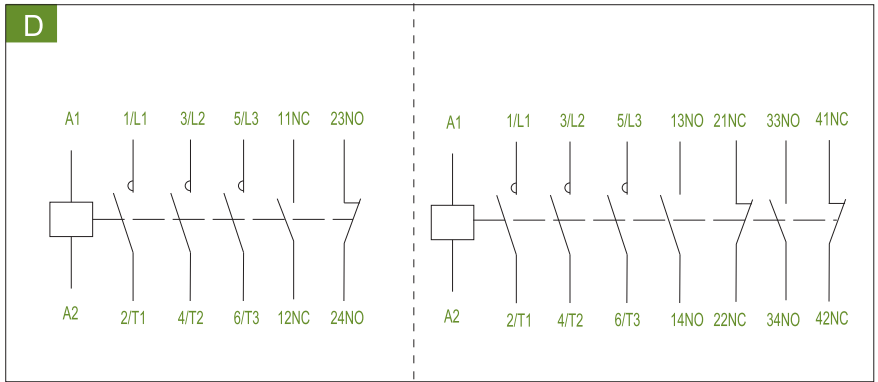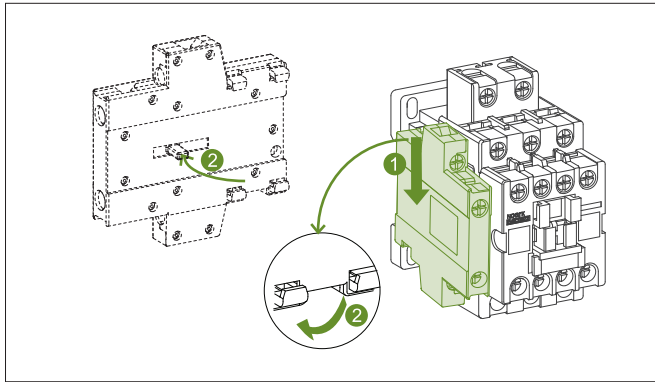

G

	M3.5 1.7N·m									
			mm ² 1.5~6	mm ² 1.5~6	mm ² 1~6	mm ² 1~4	mm ² 1~6	mm ² 1~4	mm ² 1.5~6	mm ² 1.5~6
	M3.5 1.7N·m									
A1 A2			mm ² 1~4	mm ² 1~4	mm ² 1~4	mm ² 1~2.5	mm ² 1~4	mm ² 1~2.5	mm ² 1~4	mm ² 1~4