


Ex9C25~38

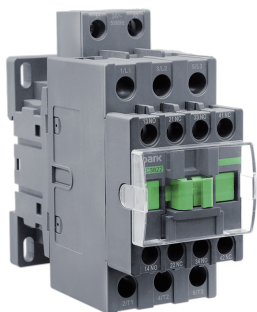

Contactor
Stykač
Stýkač
Stycznik
Contactor
Leistungsschutz
Contacteur
контактор

IEC/EN 60947-4-1

Mounting instructions

Montážní návod

Montážne inštrukcie

Instrukcja montażu

Instruțiuni de asamblare

Montageanweisung

Instructions de montage

Инструкция по монтажу

Monteringsanvisning

Istruzioni di montaggio

Instrucciones de montaje

Összeszerelési útmutató

Asennusohjeita

Montage-instructies

Instruções de montagem

Navodila za montažo

Οδηγίες Εγκατάστασης

Инструкции за инсталиране

Monteringsvejledningen

Montažu upute

Surinkimo instrukcijos

Instalēšanas instrukcijas

Скупштина упутство

Paigaldusjuhendi

Caution: Installation by electricians only

Varování: Montáž pouze osobou s elektrotech. kvalifikací

Varovanie: Montáž iba osobou s elektrotech. kvalifikáciou

Uwaga: Montaż tylko przez uprawnionych instalatorów

Atenție: Instalare numai de către electricieni


Vorsicht: Montagenur durch Elektrofachkräfte

Attention: Montage uniquement par un électricien


Осторожно: Монтаж только электрика

NOARK

B



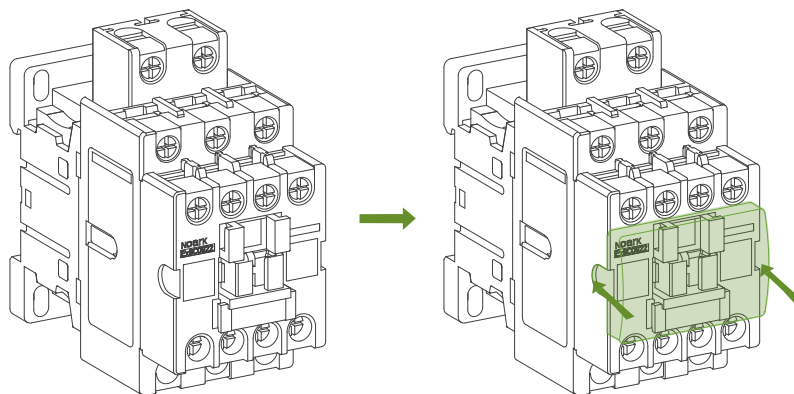






C

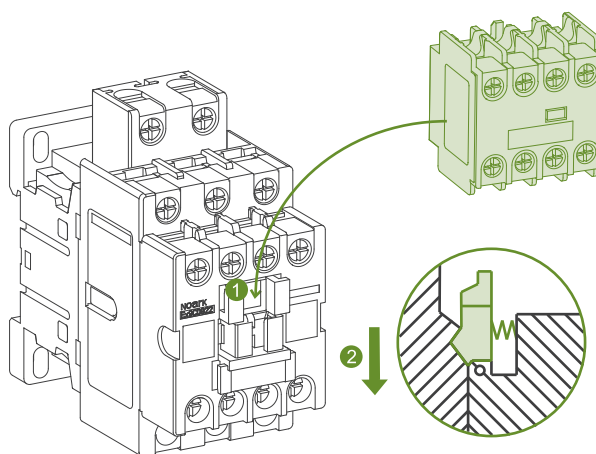

A

Ex9C25/Ex9C32/Ex9C38

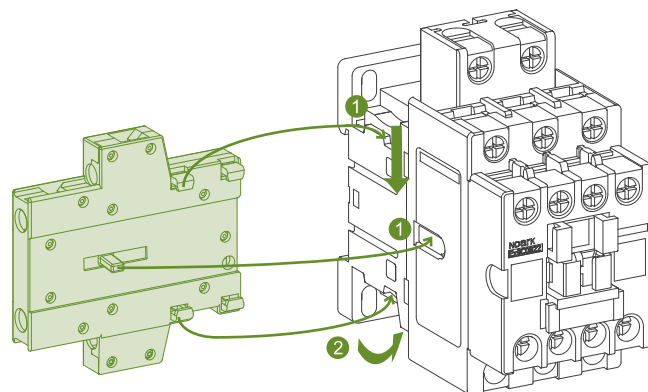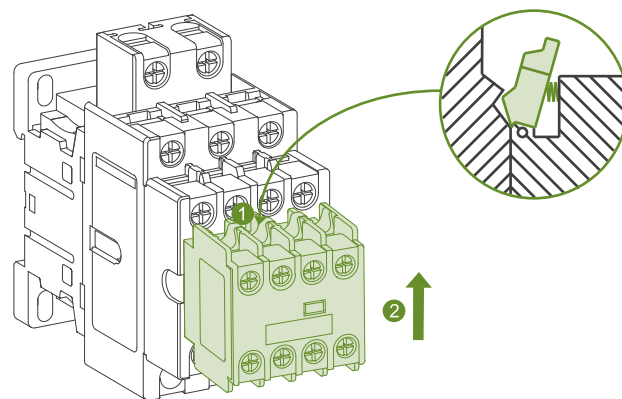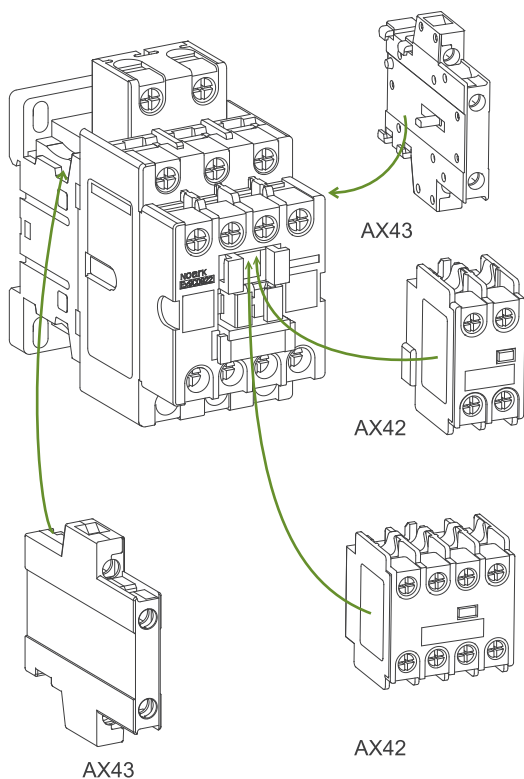

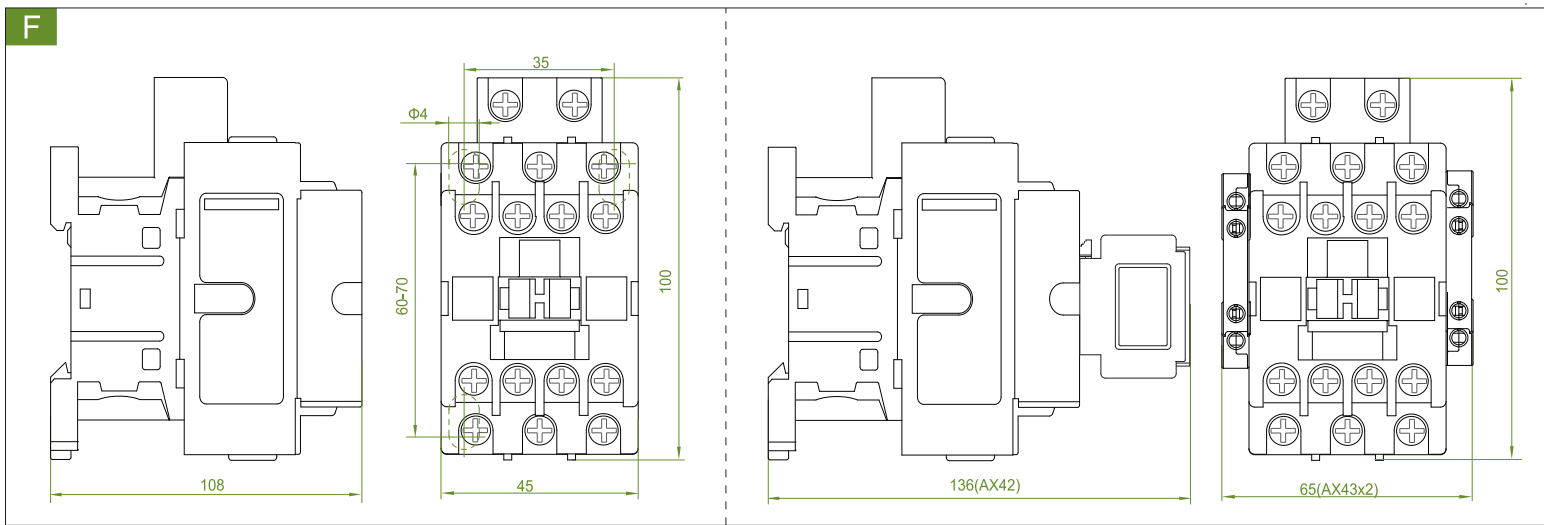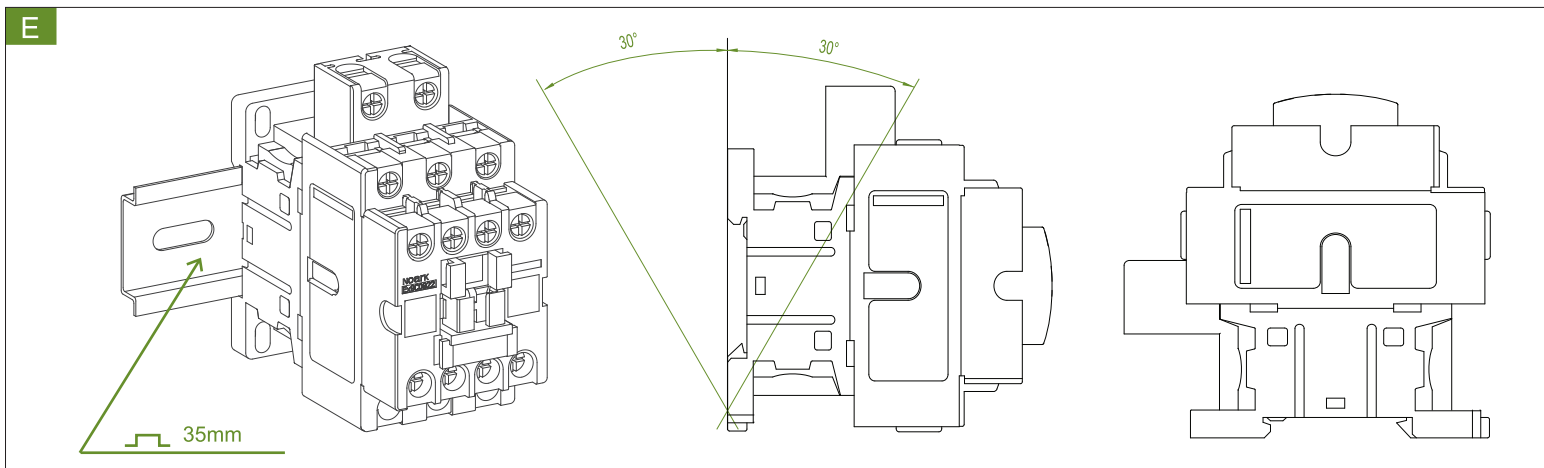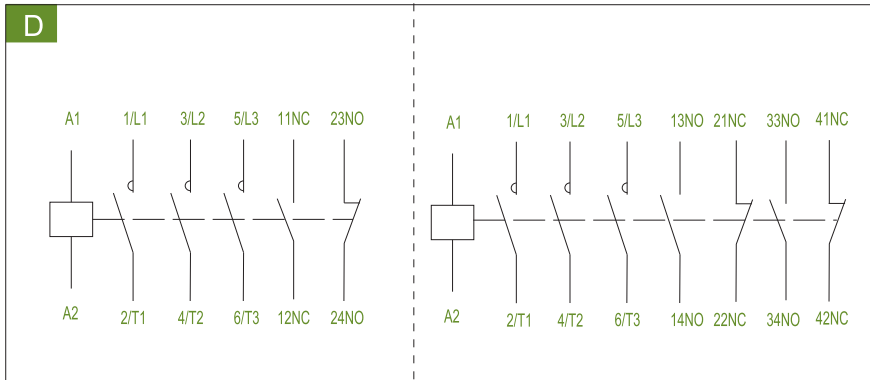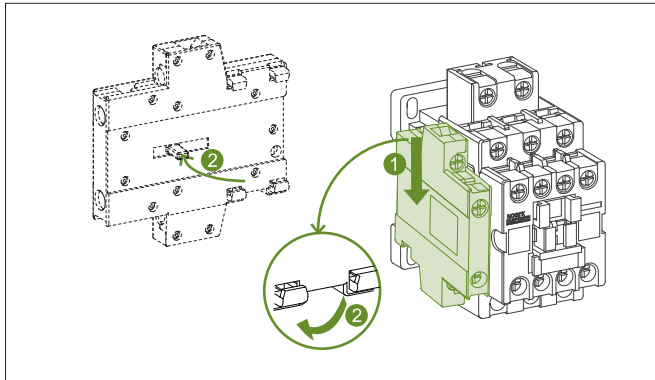

G

	M4 2.5N·m									
			mm ²	mm ²	mm ²	mm ²	mm ²	mm ²	mm ²	mm ²
			2.5~10	2.5~10	1~10	1.5~6	1~10	1.5~6	1.5~10	2.5~10
	M3.5 1.7N·m									
A1 A2			mm ²	mm ²	mm ²	mm ²	mm ²	mm ²	mm ²	mm ²
			1~4	1~4	1~4	1~2.5	1~4	1~2.5	1~4	1~4